
Gene's Antenna Service

2065 NW Buchanan Ave.

Corvallis, Oregon 97330

Phone 541 752-6895 genesantennaservice.com

Check Switch Procedure

Updated 12-12-11

This procedure is used whenever you move a Dish Network satellite receiver from one dish to another or if the LNB on the front of the dish is replaced. It is needed to ensure that the receiver knows what type of dish it is using. It is also used sometimes as a way to test whether you are properly aimed at your normal satellites.

1. Press Menu on the Dish Network remote.
2. Select #6--System Setup.
3. Select #1--Installation.
4. Select #1—Point Dish.
5. Cursor up to “Check Switch” and hit Select on your Dish Network remote.
6. Cursor over to “Test” and hit Select.
7. Wait until done. You will have either 2 checks, 3 checks or 38 checks depending on what kind of LNB you have.
8. If you get a screen saying there are fewer satellites detected, then move your cursor to the “Save” button and hit select.
9. After the test is finished the screen will usually list

Satellite: 119 119 110 110
Polarity: Odd Even Odd Even.

OR

Satellite: 119 110
Polarity: All All

OR

Satellite: 119 110 129
Polarity: All All All

OR

Satellite Input 1

Satellite: 119 110 129
Trans: OK OK OK

Satellite Input 2

Satellite: 119 110 129
Trans: OK OK OK

If it is different than this you should let me know.

10. Push View after this to get your picture back in about 2 minutes. Or if you don't have a View key push cancel until you are out of all the Menu screens.